

# EGATORK TORQUE CALIBRATION MACHINES



## Type I



**69200 or 69201**  
*torque tester included*


**1. Accurate** measurements.

**2. Reliable and easy** to operate.

**3. Manual** operation.

**4. Included software** for collecting measurements in computer.

## Type II

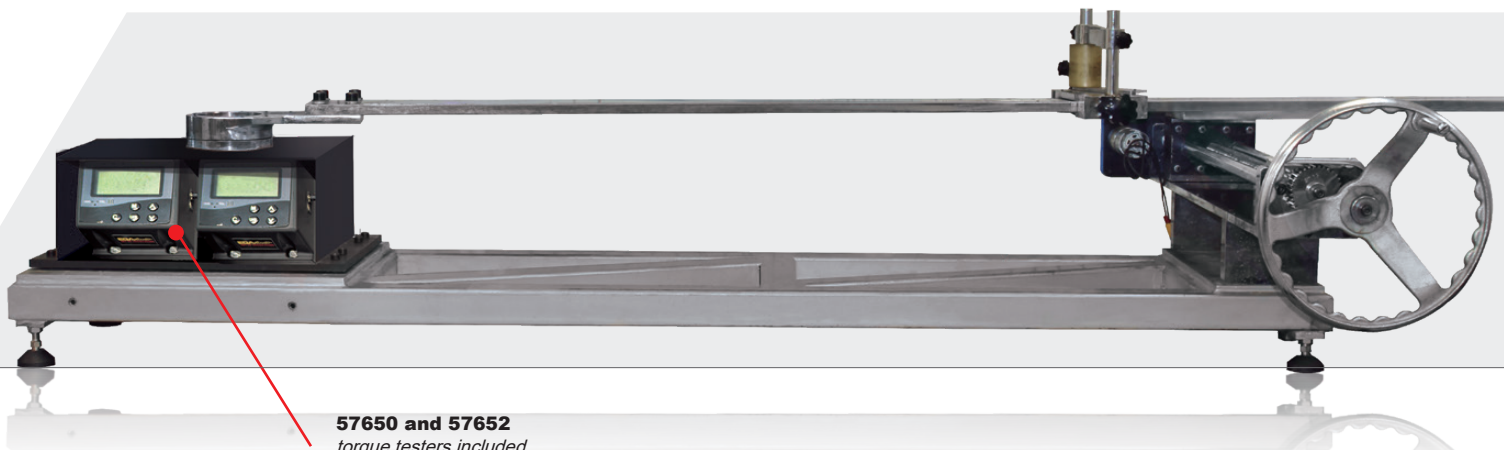

**57650 and 57652**  
*torque testers included*

# EGATORK TORQUE CALIBRATION MACHINE

Type I



| COD.         | N.m   | LxWxH       | Includes:           | Optional accessory (not included)           |
|--------------|-------|-------------|---------------------|---|
| <b>57665</b> | 5-50  | 625x260x310 | 69201 Torque tester | 57653 Real time measurement torque software |
| <b>57666</b> | 0,5-5 |             | 69200 Torque tester |   |

12M

## TORQUE TESTER

| COD.         | AF<br>inch | N.m   | Lb.ft       | Lb.in       | Kg.cm       |   |     |
|--------------|------------|-------|-------------|-------------|-------------|---|-----|
| <b>69200</b> | 1/4        | 0,5-5 | 0,369-3,688 | 4,425-44,25 | 5,099-50,99 | 1 | 0,7 |
| <b>69201</b> | 3/8        | 5-50  | 3,688-36,88 | 44,25-442,5 | 50,99-509,9 |   | 1,1 |


12M



| TECHNICAL SPECIFICATION      |                         |
|------------------------------|-------------------------|
| Accuracy                     | +/- 0.5% (CW/CCW)       |
| Calibration certificate      | ●                       |
| Preset Torque values         | 10                      |
| Warning system               | Light alarm             |
| Operation mode               | 1st / Peak hold / Track |
| Storage temperature          | -20 °C - 70 °C          |
| Screen                       | 4 digits                |
| Designed for torque wrenches | Dial - Click - Digital  |
| USB output                   | ●                       |
| Automatic power off          | ●                       |
| Software CD                  | ●                       |

# EGATORK TORQUE CALIBRATION MACHINE

Type II

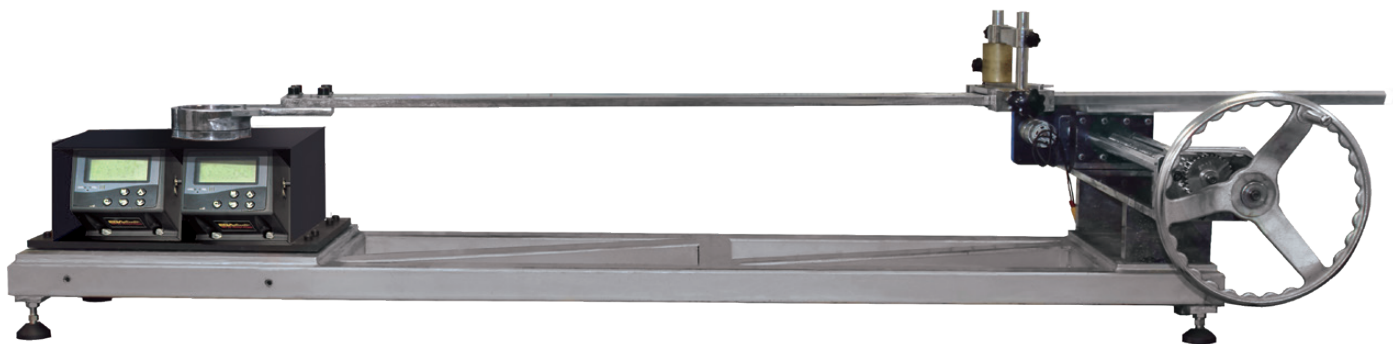

| COD.         | N.m     | LxWxH        | Includes:                  | Optional accessory (not included)           |
|--------------|---------|--------------|----------------------------|---|
| <b>57664</b> | 35-2000 | 1900x800x610 | 57650/57652 Torque testers | 57653 Real time measurement torque software |

12M

## TORQUE TESTER

| COD.         | AF inch | AF mm | N.m      | Lb.ft     | Lb.in   | Kg.cm    | Icon 1 | Kg  |
|--------------|---------|-------|----------|-----------|---------|----------|--------|-----|
| <b>57650</b> | 1/2     | -     | 35-350   | 7.4-258.1 | 88-3097 | 102-3571 | 1      | 2,9 |
| <b>57652</b> | -       | 27*   | 200-2000 | 148-1475  | -       | -        | -      | 3,5 |

12M



| TECHNICAL SPECIFICATION      |                         |
|------------------------------|-------------------------|
| Accuracy                     | +/-1% (CW/CCW)          |
| Calibration certificate      | ●                       |
| Preset Torque values         | 10                      |
| Warning system               | Light alarm             |
| Operation mode               | 1st / Peak hold / Track |
| Working temperature          | 5 - 40 °C               |
| Storage temperature          | -20 °C - 70 °C          |
| Screen                       | 4 digits                |
| Designed for torque wrenches | Dial - Click - Digital  |
| USB output                   | ●                       |
| Automatic power off          | ●                       |
| Software CD                  | ●                       |

**12M** 12 MONTHS OF WARRANTY